

## Seed Tender Preseason Checklist

#### 1.) Wireless Remote Battery Charging

• Charge the batteries for the wireless remote. The batteries can discharge during storage.

\* It is highly recommended to use rechargeable batteries\*

# Meridian



Generation 2 Remote
Unverferth



#### 2.) Align and Tension

- Check the conveyor belt tension. Do not over-tension the belt.
- Check the conveyor belt alignment. Consult operators manual for proper alignment procedure.
- Inspect the seals and brushes at the intake end of the conveyor.

#### 3.) Wheels and Tires

- Check the tire pressure. When loaded, the tire should stand up with no sidewall buckling or distress as it rolls.
- Check the wheel nut torque.

### 4.) Engine

- Fill the fuel tank with fresh gasoline if it was drained before storage.
- Check the engine oil level.
- Check the air filter. Clean or replace the filter if necessary.
- Review the engine owner's manual for more details.

#### 5.) Hydraulic Oil (ATF or AW46)

- Check the Hydraulic oil filter gauge and replace the hydraulic filter and oil if the gauge is in the red portion.
- Verify the hydraulic oil level in the reservoir is 1" to 1.5" from the top of the sight gauge.



#### 6.) Lubrication

- Grease the conveyor bearings and conveyor pivot points if not completed before storage.
- Lubricate the wheel bearings according to the seed tender owner's manual.

#### 7.) Battery

- If you have a battery disconnect turn the battery disconnect switch on when ready to use the seed tender. Turn the switch off when the seed tender is not used for a long period of time.
- If you do not have a battery disconnect make sure your battery is charged and/or replaced. **NEVER** jump your battery.



DO NOT jump battery



**Battery Disconnect** 



